

EU / UK DECLARATION OF CONFORMITY

We,

Impacto Protective Products Inc.
PO Box 524
Belleville, ON K8N 5B2
Canada

Declare that the PPE described here after,


METGUARDPRO

are in conformity with the EC Directive 89/686, Annex III.

this declaration of conformity is self-certified and issued under the sole responsibility of the manufacturer;

The technical Construction File is maintained at the following addresses:

1. Impacto Protective Products Inc.
PO Box 524
Belleville, ON K8N 5B2 Canada
Tel 0613 9660 062
Fax 0613 9660 067
UK free phone 0800 0280 243
Email impacto@impacto.ca
Contact Mr. Eric Lehtinen

Authorized Signatory  Date Jan 5, 24

Name: Eric Lehtinen

Position: President
Impacto Protective Products Inc.

Manufacturer's User Manual


Easy to fit, the **METGUARD PRO** attaches to the top of steel toe or regular footwear and is secured with existing laces or optional straps. Designed and tested to compliment steel toe and safety footwear.

Suitable for use in all workplaces and industries, the **METGUARD PRO** is designed to protect the upper foot from metatarsal injuries by deflecting the impact of falling loads and by spreading the impact load.

Part# METGUARDPRO

Sold in Pair.

Simple Fitting Instructions

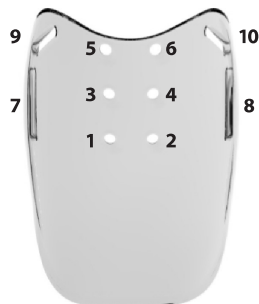

I
G
E
C
A



J
H
F
D
B

Lace Up Version (lace up footwear)

Run lace from (A) through hole (1) and lace from (B) through hole (2), ensure laces are the same length.

Cross lace from (1) through (4) and down through (D) Cross lace from (2) through (3) and down through (C).

Cross lace from (C) through (F) and up through hole (6) Cross lace from (D) through (E) and up through hole (5).

Cross lace from (6) through (G) and lace (5) through (H) Continue to lace up footwear as normal.

Note: Depending on lace-up footwear type, holes 5 & 6 may not be required.

Strap On Version (elastic sided/slip on footwear)

Run straps through slots 7 & 8 under footwear at (A) and secure the buckle at the side.

Optional

Second strap (if required) can be fitted through slots 9 & 10 and secured around the back of footwear at (B)



METGUARD PRO must be replaced if damaged due to severe impact or deterioration. **Do not modify the METGUARD PRO.** For full protection METGUARD PRO must be fitted as per instructions.

Storage: Keep in a clean, dry, dust free environment, preferably in a suitable storage case. Under normal usage and correct storage, this product should offer sufficient protection for 2 years.

Cleaning / Disinfection: Thoroughly clean all surfaces with a mild soap solution and then rinse off all traces of soap solution. Air dry or pat dry with a clean soft cloth.

Maintenance: Clean all surfaces with mild soap solution and then rinse off all traces of the soap solution. Air dry or pat dry with a clean, soft cloth.

The obsolescence deadline or period of obsolescence of PPE: 2 years from first use.

Tested to Metatarsal Impact Resistance Standards:

ASTM F2412-18a CL. 7 Only M/Ht F/Ht

ASTM F2413-18 CL 5.3 Only

For Temporary Use.

Not a replacement for Metatarsal or Steel toe footwear.

This Metatarsal Protector can supply protection against superficial mechanical actions such as cuts, abrasions and low energy impact. It is not designed to protect the foot against high energy impact cutting such as chainsaws. The Metatarsal Protector must be worn according to the user manual and fastened tight.

International Patents Pending.

Distributed by: Impacto Protective Products Inc.

www.impacto.ca, N. America 888 232 0031, UK free call 0800 0280 243, Tel 613 966 0062

Fax 613 966 0067, E-mail: impacto@impacto.ca, PO Box 524, Belleville, ON Canada K8N 5B2



**metguard
pro**

www.metguard.com