

Manufacturer's Instructions and User Information

Name and Address of the manufacturer: Impacto Protective Products Inc.
PO Box 524, Belleville, ON K8N 5B2 Canada

Style Identification: 9064, 9065, 9066, 9067, 9068

Description: **IMPACTO® VIBRATION REDUCING TOOL HANDLE GRIP WRAP KIT.**
THIS GRIPKIT INCLUDES A SHEET OF VISCO-ELASTIC POLYMER
PADDING AND SELF-ADHESIVE SILICONE TAPE.

9066: 6.5" x 5" x 3/16" thick, waffle VEP sheet, 1 roll of tape

9068: 6.5" x 5" x 1/8" thick, waffle VEP sheet, 1 roll of tape

9065: 13" x 5" x 3/16" thick, waffle VEP sheet, 2 rolls of tape

9067: 13" x 5" x 1/8" thick, waffle VEP sheet, 2 rolls of tape

9064: 13" x 15" x 3/16" thick, waffle VEP sheet, 6 rolls of tape




These garments bear CE marking to demonstrate compliance with EU
2016/425 Personal Protective Equipment Annex II Health & Safety
Requirements.

EU Declaration of Conformity: <https://www.impacto.ca/products/datasheet-ce-conformity-statements/>

Fitting Instructions:

- 1) Identify the area of the tool where the VEP waffle sheet is to be applied. Mark and cut the sheet to desired size.
- 2) Clean tool handle to remove dirt or grease.
- 3) Remove paper backing on the VEP sheet. With the waffle side out, wrap sheet around the tool handle. Where the sheet begins to overlap mark with a pen and cut with scissors. The original end and the newly trimmed end should meet with no overlap.
- 4) Spirally wrap the tape over the VEP with the blue line showing. The thin tape should overlap half the width of the tape per wrap around the handle. Use the blue line as your guide. While wrapping the tool handle peel the cellophane backing from the tape and stretch the tape to ensure proper sealing.
- 5) Once the VEP has been covered, cut the tape from the spool.
- 6) For correct fit, use a knife or scissors to cut VEP away from trigger, vents or other areas of the tool to prevent interference with normal and safe use of tool.

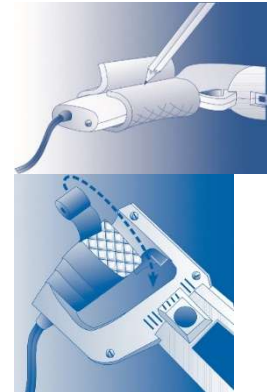

Sold per each.

Washing Instructions:

Not washable, scrub excess dirt with soft cloth.

Limitations of Use:

These products are physiological aids. It is important to follow using instructions. **WARNING:** Because power tools come in many shapes, sizes and degrees of wear, no warranty is given or implied that this material is suitable for any specific vibration-reducing application. IMPACTO recommends that users conduct their own tests to determine acceptable performance.

After Care:

Follow the manufacturer's recommendations for washing and cleaning. To ensure optimum protection, regular comparisons are recommended against a new product. This product is warranted against defects in materials and workmanship for one year from the time of purchase. There are no other warranties expressed or implied. The company will not accept liability for product, whose use and care advice has been ignored.

EU DECLARATION OF CONFORMITY

We,

Impacto Protective Products Inc.
PO Box 524
Belleville, ON K8N 5B2
Canada

Declare that the PPE described here after,

9064, 9065, 9066, 9067, 9068

These garments are in conformity with the EU Regulation 2016/425.

this declaration of conformity is issued under the sole responsibility of the manufacturer;

The technical Construction File is maintained at the following addresses:

1. Impacto Protective Products Inc.
PO Box 524
Belleville, ON K8N 5B2 Canada
Tel 0613 9660 062
Fax 0613 9660 067
UK free phone 0800 0280 243
Email impacto@impacto.ca
Contact Mr. Eric Lehtinen

Authorized Signatory



Date June 25, 2025

Name:

Eric Lehtinen

Position:

President
Impacto Protective Products Inc.